 


# Easy-To-Read, Easy-To-Use



WORKS WITH MOST  
HVAC SYSTEMS!

## Comfort Sentry™ 4/2 Touchscreen w/ Humidity Control

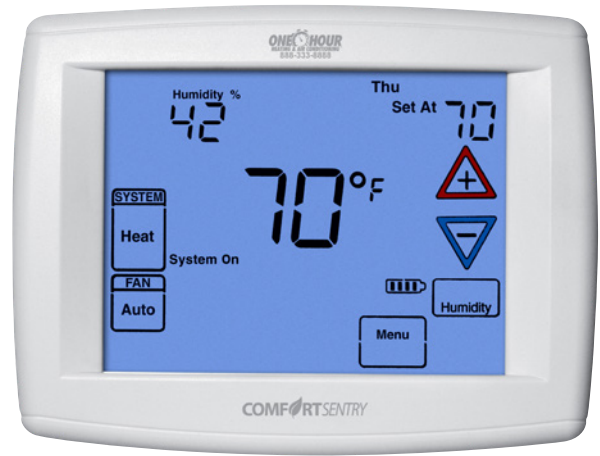

 
### PRODUCT DETAILS

The **Comfort Sentry™ Touchscreen Thermostat w/ Humidity Control** is an inexpensive upgrade for an easy-to-use thermostat that gives you more control over your indoor air. The humidity touchscreen offers dehumidification and humidification control, delivering a new level of comfort to your home. Preinstalled or customizable programs make heating and cooling your home more efficient than ever.

- Large, backlight touchscreen for easy viewing and control
- High accuracy gives you the greatest comfort
- Save up to 33% in heating and cooling costs

### FEATURES

- Universal 4 heat/2 cool
- Dual fuel capable with Smart Fuel™ logic program
- Exclusive Cool Savings™ feature saves energy during peak A/C demand periods
- Choice of 7 day, 5/1/1 day programmable, or non-programmable
- Humidification and dehumidification control

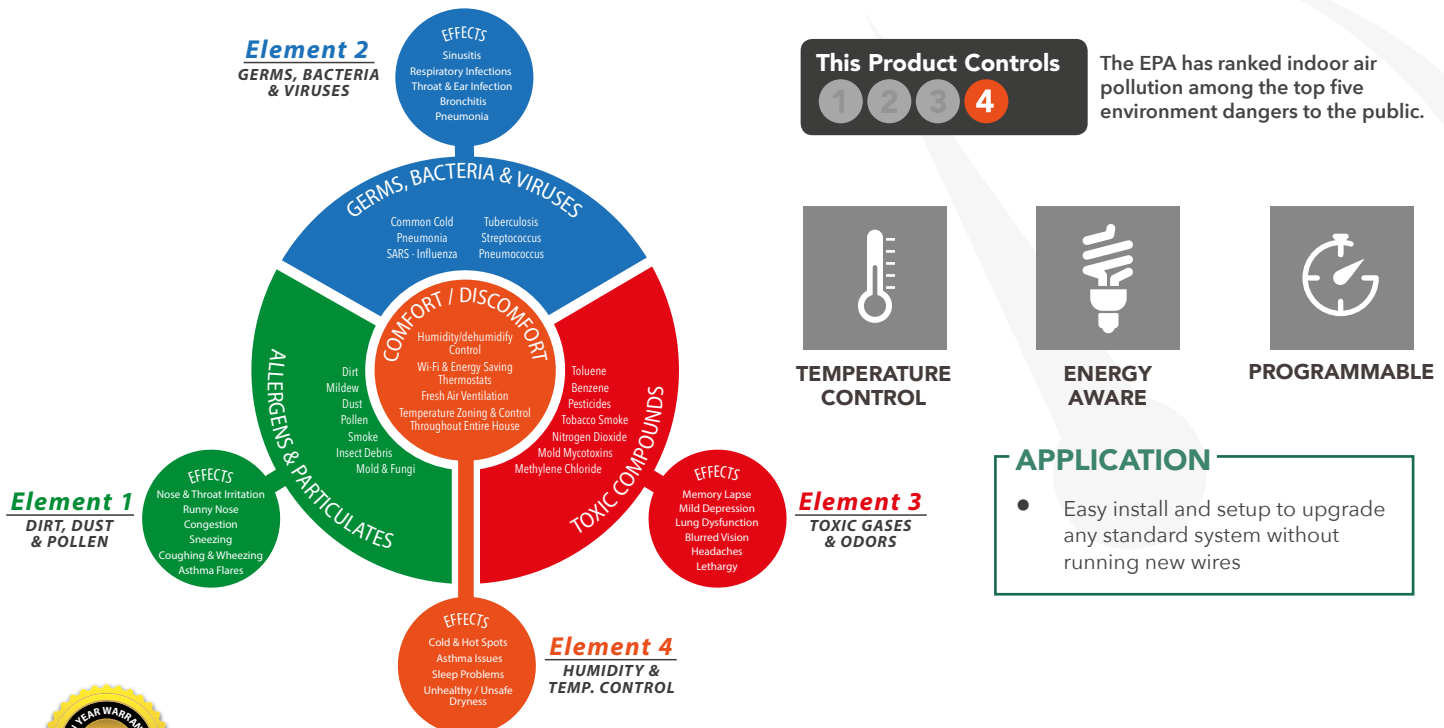

### This Product Controls



The EPA has ranked indoor air pollution among the top five environment dangers to the public.



TEMPERATURE CONTROL



ENERGY AWARE



PROGRAMMABLE

### APPLICATION

 
- Easy install and setup to upgrade any standard system without running new wires



**PRODUCT SPECIFICATIONS**

Thermostat Configuration Options	Thermostat Applications	Maximum Stages Heat/Cool
Single Stage 1 No Heat Pump (SS1)	Gas, Oil, Electric, Heat Only, Cool Only or Heat/Cool Systems, 2 or 3 wire Hydronic Zone (Hot Water or Steam) Systems, 24 Volt or Millivolt	1/1
Multi Stage 2 No Heat Pump (MS2)		2/2
Heat Pump 1 Single Stage Compressor Heat Pump (HP1)	Single Stage Compressor Heat Pump Systems - up to 2 Stages Aux./Emergency Heat	3/1
Heat Pump 2 Two Stage or Two Compressor Heat Pump (HP2)	Two Stage or Two Compressor Heat Pump systems - up to 2 Stages Aux./Emergency Heat	4/2

**HOME SCREEN DESCRIPTION**

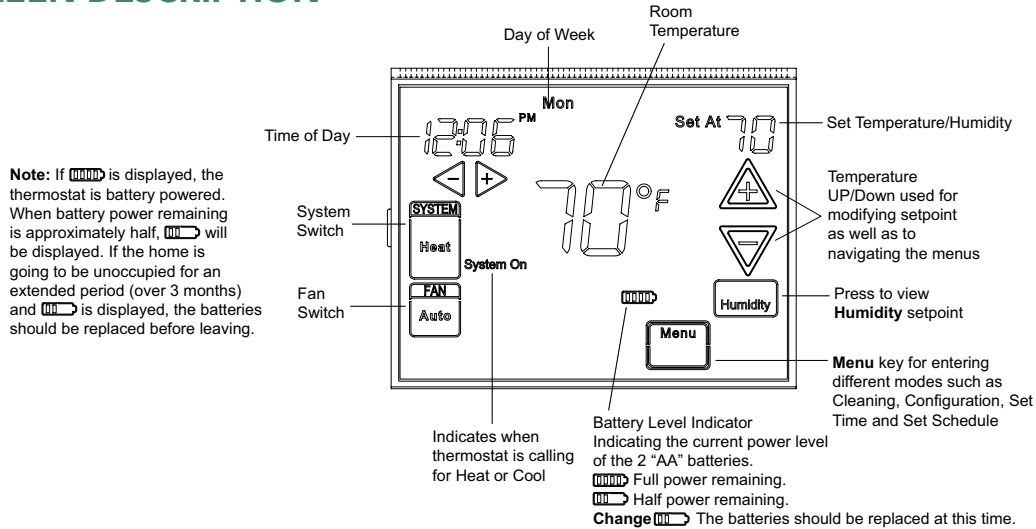

**INSTALLATION NOTES**

1. Pull the thermostat body off the thermostat base. Forcing or prying on the thermostat will cause damage to the unit.
2. Place base over hole in wall and mark mounting hole locations on wall using base as a template.
3. Move base out of the way. Drill mounting holes. If you are using existing mounting holes and the holes drilled are too large and do not allow you to tighten base snugly, use plastic screw anchors to secure the base.
4. Fasten base snugly to wall using mounting holes and two mounting screws. Leveling is for appearance only and will not affect thermostat operation.
5. Connect wires to terminal block on base using appropriate wiring schematic.
6. Push excess wire into wall and plug hole with a fire resistant material (such as fiberglass insulation) to prevent drafts from affecting thermostat operation.
7. Install 2 "AA" alkaline batteries.
8. Carefully line the thermostat up with the base and snap into place.

**SAFETY NOTES**

- Always turn off the power to the heating and cooling system before handling the thermostat wires.
- Make sure all wires are screwed in tightly and securely.

